


TDR Instruction Supplement Information

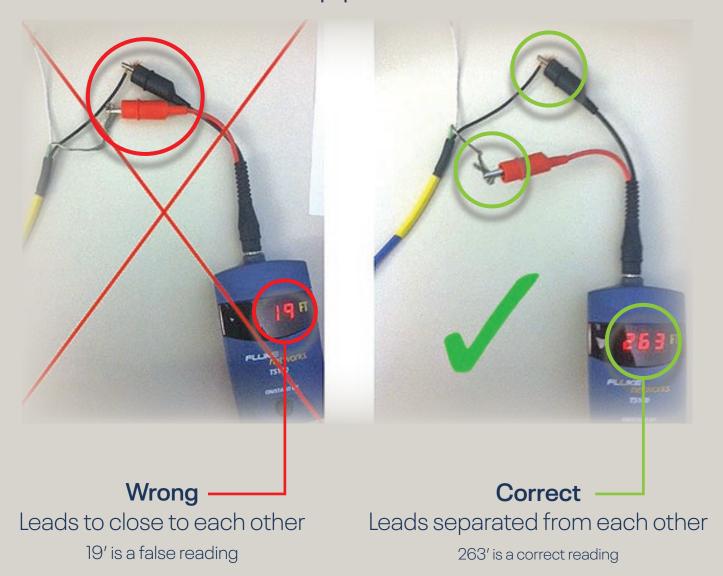

Record blk-gnd and wht-gnd readings for VOP = 62, 63 and 64

VOP Setting

To see the VOP setting on the TS100, push the lower left button while pushing the power button on. The TS100 will toggle between the reading and the VOP setting.

Tap the lower right button to step the VOP.